

User Manual

CS-D403

Closed Loop Stepper Drive



Revision 3.1

©2018 Leadshine Technology Co., Ltd.

Leadshine Technology Co., Ltd (Headquarters)

Address: Floor 11, Block A3, iPark 1001 Xueyuan Avenue

Shenzhen, Guangdong 518055

China

Tel: 86-400-885-5521
Fax: 86-755-2640-2718
Web: www.leadshine.com
Sales: sales@leadshine.com
Support: tech@leadshine.com

Leadshine America, Inc.

Address: 26050 Towne Centre Dr.

Foothill Ranch, CA 926

USA

Tel: 1-949-608-7270 *Fax:* 1-949-608-7298

Web: www.leadshineusa.com
Sales: sales@leadshineusa.com
Support: support@leadshineusa.com



Notice

Read this manual carefully before any assembling and using. Incorrect handling of products in this manual can result in injury and damage to persons and machinery. Strictly adhere to the technical information regarding installation requirements.

This manual is not for use or disclosure outside of Leadshine except under permission. All rights are reserved. No part of this manual shall be reproduced, stored in retrieval form, or transmitted by any means, electronic, mechanical, photocopying, recording, or otherwise without approval from Leadshine. While every precaution has been taken in the preparation of the book, Leadshine assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.

This document is proprietary information of Leadshine that is furnished for customer use ONLY. Information in this document is subject to change without notice and does not represent a commitment on the part of Leadshine. Therefore, information contained in this manual may be updated from time-to-time due to product improvements, etc., and may not conform in every respect to former issues.

Record of Revisions

Revision	Date	Description of Release
1.0	September, 2017	Initial Release
3.1	October, 2018	Firmware and PC software update to version 3.1





Content Table

1. Introduction	1
1.1 Features	1
1.2 Applications	1
2. Specifications	2
2.1 Electrical Specifications	2
2.2 Environment.	2
2.3 Mechanical Specifications.	3
2.4 Heat Dissipation	3
3.1 Connector P1 – Control and Digital Output Connections	4
3.1.1 Pin Assignments of P1	4
3.1.2 Typical Control and Fault Output Connections	6
3.2 Connector P2 - Encoder Connection.	7
3.3 Connector P3 - Motor Connection	7
3.4 Connector P4 – Power Supply Connection	7
3.5 Connector P5 – RS232 Connection.	7
3.6 LED Light Indication	8
4. Motor Selection	8
5. Power Supply Selection	8
5.1 Regulated or Unregulated Power Supply	9
5.2 Power Supply Sharing	9
5.3 Selecting Supply Voltage	9
6. DIP Switch Configurations	9
6.1 Microstep Resolution (SW1-SW4)	10
6.2 Other DIP Switch Settings (SW5-SW8)	10
7. Typical Connection	10



8. Sequence Chart of Control Signals	11
9. Fault Protections	12
10. Software Configuration	13
11. Accessories.	13
12. Troubleshooting	13
13. Warranty	16
Appendix A. Leadshine CS-D508 Compatible Stepper Motors	17
Appendix B. Leadshine CS-D403 Compatible Power Supplies	18
Appendix C. Powering a Third Party Motor with CS-D403	19



1. Introduction

Leadshine CS-D403 is a closed loop stepper drive designed to solve the loss of step problem in open loop stepper control systems, thus increase system reliability at minimal cost increase. It implements advanced control algorithm of Leadshine based on its tens of years' experience in stepper and servo controls. The CS-D403 is highly reliable and affordable and performs excellent in many industrial applications such as CNC, medical, electronics, packaging...

The CS-D403 can power 2-phase NEMA 8,11, 14 and 17 stepper motors with incremental encoders. Compared with traditional open loop stepper systems, a CS-D403 adopted closed loop step system can eliminate potential loss of step, make real-time position error correction, and do not need torque reservation (100% torque implementation). Also it can power the driven stepper motor with reduced heating, lower noise, low vibration...

1.1 Features

- No loss of step
- No torque reservation
- No hunting or overshooting
- No tuning for easy setup
- A configurable digital output for the option of Fault Output, In Position, or Brake Control
- Low noise and vibration, smooth motion
- Enhance performance at low speed application (<60RPM)
- 20-50VDC supply voltage, max 3A output current
- Max 200 KHz input frequency
- 15 micro step settings of 800-51,200 via DIP switches, or 200-51,200 via software (increase by 200)
- Protections for over voltage, over current and position following error

1.2 Applications

When a CS-D403 closed loop stepper drive is implemented with a compatible stepper motor with encoder, the closed stepper system can be adopted in many small to median speed applications such as CNC routers, CNC mills, CNC laser cutters, CNC plasma, lab automation instruments, plotters, medical equipment, electronic equipment, small packaging machines, etc.



2. Specifications

2.1 Electrical Specifications

Parameters	Min	Typical	Max	Unit
Output Current	0.5	-	3.0 (Peak)	A
Operating Voltage	20	24	50	VDC
Logic signal current	7	10	16	mA
Pulse input frequency	0	-	200	kHz
Minimal pulse width	2.5	-	-	μS
Minimal direction setup	5.0	-	-	μS
Isolation resistance	500			$M\Omega$

2.2 Environment

Cooling	Natural Cooling or Forced Cooling		
	Environment	Avoid dust, oil fog and corrosive gases	
	Ambient Temperature	0°C - 65°C (32°F - 149°F)	
Operating Environment	Humidity	40%RH-90%RH	
	Operating Temperature	0°C - 50°C (32°F - 122°F)	
	Vibration	10-50Hz / 0.15mm	
Storage Temperature	-20°C — 65°C (-4°F - 149°F)		
Weight	Approx. 280 g (9.9 Oz)		



2.3 Mechanical Specifications

(unit: mm [1inch=25.4mm])

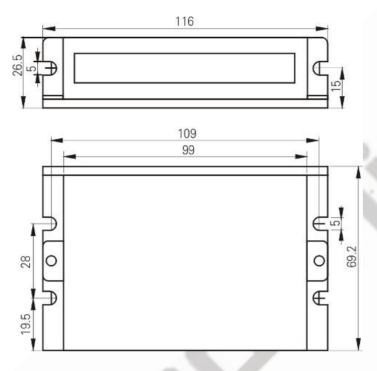


Figure 1: Mechanical specifications

2.4 Heat Dissipation

- CS-D403 reliable working temperature should be no more than 60°C (140°F)
- It is recommended to mount the drive vertically to maximize heat dissipation. Mount a cooling fan nearby if necessary.
- If multiple CS-D403 drives are installed, it is suggested to keep a minimal 30mm (12 inches) between two of them.



3. Connections and LED Indication

A CS-D403 closed loop stepper drive has 5 connection blocks from P1 to P5 (see figure 2).

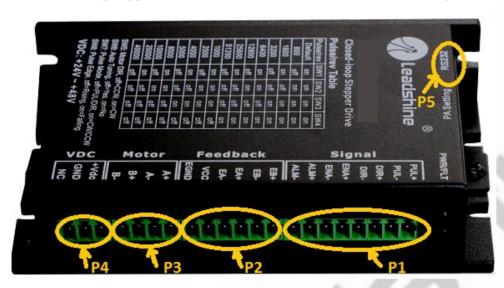


Figure 2: CS-D403 connectors

3.1 Connector P1 – Control and Digital Output Connections

3.1.1 Pin Assignments of P1

The P1 connector in Figure 2 contains connections for control signals and a configurable digital output.

a) Pinout Definitions

There are 3 control signals for pulse, direction, and enable. See the following table for details.

Pin Name	I/O	Details		
PUL+	I	<u>Pulse signal:</u> (1). In single pulse (pulse & direction) control mode, this input represents pulse signal. A pulse signal is active at the rising or falling voltage edge (set by DIP switch SW8).		
PUL-	I	(2). In double-pulse (CW/CCW) control mode (set by DIP switch SW7), this signal input represents clockwise (CW) pulse, and is active at both high voltage level and low voltage level. (3). 4.5-5V for voltage HIGH, 0-0.5V for voltage LOW (same for DIR signals). (4). Pulse width should be set to 2.5µs or longer.		
DIR+	I	<u>Direction signal:</u> (1). In single pulse (step & direction) control mode, this signal's low and high voltage levels represent the two directions of motor rotation (e.g. clockwise and		
DIR-	I	counterclockwise). (2). In double-pulse (CW & CCW) control mode, this signal represents counterclockwise (CCW) rotation. It is active at both voltage high level and low level. (3).		



		Minimal DIR signal setup time should be at least 5µs. (4). You can reverse the default rotation direction by toggling the SW5 DIP switch.
ENA+	I	Enable signal: This signal is used for enabling/disabling the drive. High voltage level of 4.5-24VDC (NPN control signal) for enabling the drive and low voltage level of 0-0.5VDC for
ENA-	I	disabling the drive. PNP and Differential control signals are on the contrary, namely Low level for enabling. By default this signal is left UNCONNECTED & ENABLED .
ALM+	0	Configurable Digital Output Signal: A configurable OC output signal. It takes a sinking or
ALM-	O	sourcing 20mA current at 5-24V. It can to be configured as one of the 3 types, <i>ALARM</i> (default), <i>IN POSITION</i> , or <i>BRAKE CONTROL</i> through Leadshine ProTuner CS-D software.

Notes: (1) Shielding control signal wires is suggested; (2) **to** avoid/reduce interference, don't tie control signal cables and power wires together. (3) If you uses PLC, you can connect the 2K resistor refer to <u>Chapter 3.1.2</u>, or contact Leadshine to replace the 24V special model.

b) Fault Output, In Position, or Brake control Output Configuration

The digital output on the P1 connector, marked as ALM+ & ALM-, is software configurable (read Leadshine ProTuner CS-D software manual). It can be configured as one of the available 3 options - Fault Output", "In Position", and "Brake Control". Read Leadshine ProTuner CS-D closed loop software manual for how to configure this output.

• Fault Output

FAULT output is the default configuration. This output signals a fault condition including over-voltage, over-current, or position following error. This output can be used to drive devices such as a relay, a LED, etc.; or as an input signal to electronic devices like a PLC.

For example, in a multi-axis system like a CNC machine when one of the axes fails such a fault output signal can be feedback to the motion controller for a followed action (e.g., auto machine shutdown, auto error clearing, etc.).

• In Position

Use Leadshine ProTuner for CS-D software to configure this output as an IN POSITION output. In this case, an output signal can be sent out when the targeted position is in the "Target" range (see *parameter Distance to Send "In position" Output Signal* in software manual) to external devices such as relays, motion controllers, PLCs, IO boards, etc.

Brake Control

Use Leadshine ProTuner for CS-D software to configure this output as a BRAKE CONTROL output. In this case, this signal can be used for automatic brake control while system power failure. It is recommended to connect a fly-wheel diode in parallel to a 24VDC relay and brake coil connection. Refer to the following figure for brake connection.



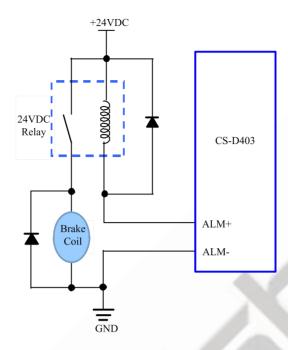


Figure 3: Brake Output Connection

3.1.2 Typical Control and Fault Output Connections

The CS-D403 can accept differential and single-ended control signal inputs (open-collector and PNP output). A CS-D403 has 3 optically isolated control inputs, PUL, DIR, and ENA. Refer to the following two figures for connections of open-collector and PNP signals.

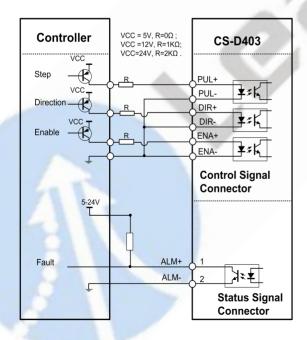


Figure 4: Connections to PNP signal

(Common-cathode)

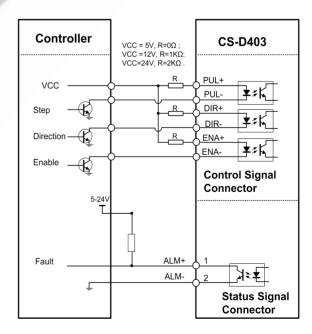


Figure 5: Connections to open-collector signal

(Common-anode)



3.2 Connector P2 - Encoder Connection

The P2 connector in Figure 2 is for encoder signal connection. Refer to the following table for details.

Drive Pin Name	Description
EB+	Encoder B+ input connection
EB-	Encoder B- input connection
EA+	Encoder A+ input connection
EA-	Encoder A- input connection
VCC	Encoder +5V voltage output connection
EGND	Power ground connection

3.3 Connector P3 - Motor Connection

The P3 connector in Figure 2 is for motor connection. Refer to the following table for details.

Pin Name	Details
A +	Stepper motor A+ connection. Connect motor A+ wire to this pin
A-	Stepper motor A- connection. Connect motor A- wire to this pin
B +	Stepper motor B+ connection. Connect motor B+ wire to this pin
B-	Stepper motor B- connection. Connect motor B- wire to this pin

3.4 Connector P4 – Power Supply Connection

The P4 connector in Figure 2 is for power supply connection. Refer to the following table for details.

Pin Name	Details
+Vdc	Power supply positive connection. 20-50VDC power supply voltage
GND	Power supply ground connection.

Notes: see Appendix B for compatible Leadshine power supplies

3.5 Connector P5 - RS232 Connection

The P5 connector in Figure 2 is a RS232 communication port for PC connection. Refer to the following pin definitions.



DS232	Commu	nication	Port -	. D I11
KOZOZ	.	писаноп	rort -	· K.J I I

Pin	Name	I/O	Description	
1	NC	-	Not connected.	
2	+5V	O	+5V power output.	
3	TxD	О	RS232 transmit.	
4	GND	GND	Ground.	-
5	RxD	I	RS232 receive.	
6	NC	-	Not connected.	



Notes: RS232 connection of CS-D403 is for tuning purpose only, not for RS232 command controls.

3.6 LED Light Indication

There are two LED lights for CS-D403, one red and one green. The GREEN one is the power indicator which will be always on generally. The RED one is a protection indicator. It is off always when a CS-D403 operates normally, but will flash 1, 2 or 7 times in a 5-second period when error protection is enabled. Different number of flashes indicates different protection type (read Section 9).

4. Motor Selection

The CS-D403 is designed to power 2-phase (or 4-phase 0.9 degree) NEMA 11,14,17 stepper motors under 10000-line incremental encoders (recommend 1000-line). Leadshine offers many high performance stepper motors compatible with the CS-D403. The CS-D403 can also power similar stepper motors with incremental encoders from third-party suppliers.

Notes: Contact with Leadshine for NEMA8, NEAM11, NEMA14 stepper motors with 2000-line encoders.

5. Power Supply Selection

The CS-D403 can power small and medium size closed loop stepper motors (frame size from NEMA8 to 17) from Leadshine or other motor manufacturers. To get good system performance, it is important to select proper supply voltage and output current. Generally speaking, supply voltage determines the high speed performance of the motor, while output current determines the output torque of the driven motor (particularly at lower speed). Higher supply voltage will allow higher motor speed to be achieved, at the price of more noise and heating. If the motion speed requirement is low, it's better to use lower supply voltage to decrease noise, heating and improve reliability. **Notes:** See Appendix B at the end of this document for Leadshine CS-D403 compatible switching power supplies specially designed for stepper & servo controls.



5.1 Regulated or Unregulated Power Supply

Both regulated and unregulated power supplies can be used to supply the drive. However, unregulated power supplies are preferred due to their ability to withstand current surge and fast response for current change. If you prefer to a regulated power supply, it is suggested to choose such a power supply specially designed for stepper/servo controls such as Leadshine RPS series (http://www.leadshine.com/producttypes.aspx?producttype=regulated-switching). Or, in the case when only normal switching power supplies are available, it is important to use "OVERSIZE" high current output rating power supplies (for example, using a 4A power supply for 3A stepper motor) to avoid problems such as current clamp. On the other hand, if unregulated supply is used, one may use a power supply of lower current rating than that of motor (typically 50%-70% of motor current). The reason is that the drive draws current from the power supply capacitor of the unregulated supply only during the ON duration of the PWM cycle, but not during the OFF duration. Therefore, the average current withdrawn from power supply is considerably less than motor current. For example, two 3A motors can be well supplied by one power supply of 4A rating.

5.2 Power Supply Sharing

Multiple CS-D403 drives can share one power supply to save space and reduce cost, if that power supply has enough power capacity. To avoid cross interference, connect each stepper drive directly to the shared power supply separately. To avoid cross interference, DO NOT daisy-chain connect the power supply input pins of the Drivers. Instead connect them to power supply separately.

5.3 Selecting Supply Voltage

The CS-D403 is designed to operate within 20-50VDC voltage input. When selecting a power supply, besides voltage from the power supply power line voltage fluctuation and back EMF voltage generated during motor deceleration needs also to be taken into account. Ideally it is suggested to use a power supply with the output of 20-48VDC, leaving room for power line voltage fluctuation and back-EMF.

Higher supply voltage can increase motor torque at higher speeds, thus helpful for avoiding losing steps. However, higher voltage may cause bigger motor vibration at lower speed, and it may also cause over-voltage protection or even drive damage. Therefore, it is suggested to choose only sufficiently high supply voltage for intended applications.

6. DIP Switch Configurations

The CS-D403 has a built-in 8-bit DIP switch to set microstep resolution, motor direction, auto tuning switch and so on.

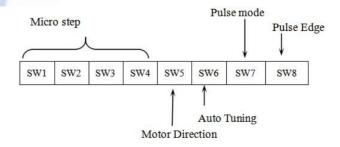


Figure 6 DIP switch Setting



6.1 Microstep Resolution (SW1-SW4)

Microstep resolution is set by SW1, 2, 3, 4 of the DIP switches as shown in the following table:

Steps/Revolution	SW1	SW2	SW3	SW4
Software Configured (Defaulted to 1600)	on	on	on	on
800	off	on	on	on
1600	on	off	on	on
3200	off	off	on	on
6400	on	on	off	on
12800	off	on	off	on
25600	on	off	off	on
51200	off	off	off	on
1000	on	on	on	off
2000	off	on	on	off
4000	on	off	on	off
5000	off	off	on	off
8000	on	on	off	off
10000	off	on	off	off
20000	on	off	off	off
40000	off	off	off	off

6.2 Other DIP Switch Settings (SW5-SW8)

	Function	On	Off
SW5	Default Direction	CW (clockwise)	CCW (counterclockwise)
SW6	Auto Tuning	No	Yes
SW7	Pulse Model	CW/CCW (double pulse)	PUL/DIR (single pulse)
SW8	Pulse Edge	Falling	Rising

7. Typical Connection

A complete closed loop stepper system should include a stepper motor with encoder, CS-D403 drive, power supply and



controller (pulse generator). A typical connection is illustrated in figure 7.

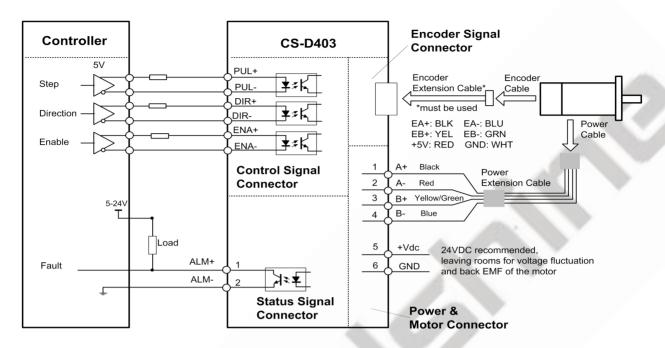


Figure 7: Typical connection

8. Sequence Chart of Control Signals

In order to avoid some fault operations and deviations, PUL, DIR and ENA should abide by some rules, shown as following diagram:

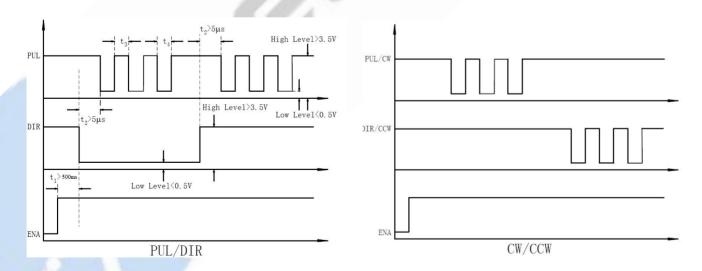


Figure 8: Sequence chart of control signals

Remark:

a) t1: ENA must be ahead of DIR by at least 500ms. Usually, ENA+ and ENA- are NC (not connected). See



"Connector P1 Configurations" for more information.

- b) t2: DIR must be ahead of PUL effective edge by 5us to ensure correct direction;
- c) t3: Pulse width not less than 2.5us;
- d) t4: Low level width not less than 2.5us.

9. Fault Protections

To improve reliability, the drive incorporates some built-in protection features.

Blink time(s)	Sequence wave of red LED	Description	Trouble shooting
1	\$ QS 444	Over-current	Turn off the power immediately. a) Check wiring is short-circuited or not; b) Check motor is short-circuited or not.
2	(S)	Over-voltage	Turn off the power immediately. a) Check if the power voltage is higher than 90VDC
3		Chip error	Restart the power supply, if the drive is still alarm, please contact after-sale
4		Fail to lock motor shaft	a) The drive is not connected to a motor; b) If alarm is occurred when connect a motor, set DIP switch SW6 to 'on' and restart power supply; If it still alarm, please check the motor power cable.
5		EEPROM error	Restart the power supply, if the drive is still alarm, please contact after-sale
6		Fail to auto tuning	Set DIP switch SW6 to 'on'
7	SS	Position following error	a) The value of position following error is set too small;b) Motor torque is not enough or motor speed is too high;c) Motor wiring error, check wiring
Always	-	PCB board is burned out	Contact after-sale a) Power supply connection is wrong



When above protections are active, the motor shaft will be free or the red LED blinks. Reset the drive by repowering it to make it function properly after removing above problems.

10. Software Configuration

The CS-D403 is designed for simple setup and implementation. For most applications no software configuration or tuning is needed especially when driving Leadshine stepper motors with encoders. If you want to do fine tuning or custom configurations such as micro-step, current percentage change..., you can use Leadshine's free ProTuner software to make the changes.

11. Accessories

If you plan to use the ProTuner software, contact your supplier or Leadshine to purchase the RS232 cable with part number <u>CABLE-PC</u> for connecting the CS-D403 to a computer with Windows 7/8/10 installed. In the case of using USB to RS232 conversion, contact your supplier or Leadshine for such a cable with part number <u>USB2.0-232</u> which has been verified working fine.





CABLE-PC (RS232 tuning cable)

USB2.0-232 (USB to RS232 Conversion Cable)

12. Troubleshooting

In the event that your drive doesn't operate properly, the first step is to identify whether the problem is electrical or mechanical in nature. The next step is to isolate the system component that is causing the problem. As part of this process you may have to disconnect the individual components that make up your system and verify that they operate independently. It is important to document each step in the troubleshooting process. You may need this documentation to refer back to at a later date, and these details will greatly assist our Technical Support staff in determining the problem should you need assistance.

Many of the problems that affect motion control systems can be traced to electrical noise, controller software errors, or mistake in wiring.

Symptoms	Possible Problems	Solutions	
Motor is not rotating	No power	Connect power supply correctly	
8	Microstep resolution setting is wrong	Setting appropriate microstep	



	Fault condition exists	Check wiring and restart power	
	The drive is disabled	Drive restore factory setting, and keep ENA+, ENA- input signals unconnected.	
Wrong motor rotation direction	The Direction signal level is reverse	Toggling the SW5 DIP switch	
	Red light flashes once in a 5-second period	The motor coil may short circuit or exiting the wrong wiring	
	Red light flashes twice in a 5-second period	The power supply exceeds Max. operation voltage	
The drive in fault	Red light flashes 7-times in a 5-second period	If using Leadshine's motor, refer to motor wiring in datasheet;If using 3 rd motor, need to swap the wiring of motor phase A+ and phase A-	
	Red light is always on after power on	The drive is burned	
	Control signal is too weak	Ensure the current of control signal is within 7-16mA	
Erratic motor motion	Control signal is interfered	Don't tie the control signal cable with power cable together	
	Wrong motor connection	Refer to user manual of drive and motor datasheet	
	Something wrong with motor coil	Check the motor is normal	
Motor stalls during acceleration	Current setting is too small	Choose another power supply with lager power or increase the output current of drive	
	Motor is undersized for the application	Choose another motor with higher torque	
	Acceleration is set too high	Reduce the acceleration	
	Power supply voltage too low	Choose another power supply with large voltage output	
	Inadequate heat sinking / cooling	Refer to chapter 2.4	
Excessive motor & drive heating	Motor peak current setting is too high	Reduce the current value refer to motor datasheet	



Motor vibration when power on

Speed loop Kp is too high

Reduce the speed loop Kp value





13. Warranty

Twelve Month Warranty

Leadshine Technology Co., Ltd. warrants its products against defects in materials and workmanship for a period of 12 months from shipment out of factory. During the warranty period, Leadshine will either, at its option, repair or replace products which proved to be defective.

Exclusions

The above warranty does not extend to any product damaged by reasons of improper or inadequate handlings by customer, improper or inadequate customer wirings, unauthorized modification or misuse, or operation beyond the electrical specifications of the product and/or operation beyond environmental specifications for the product.

Obtaining Warranty Service

To obtain warranty service, please contact your seller to obtain a returned material authorization number (RMA) before returning product for service.

Shipping Failed Products

If your product fail during the warranty period, please contact your seller for how and where to ship the failed product for warranty or repair services first, you can also e-mail customer service at tech@leadshine.com to obtain a returned material authorization number (RMA) before returning product for service. Please include a written description of the problem along with contact name and address.





Appendix A. Leadshine CS-D508 Compatible Stepper Motors

The following Leadshine stepper motors with 1000-line encoders have been tested working with the CS-D508 closed loop stepper drive.

Model	Frame Size (NEMA)	Torque (N.m / Oz-In)	Series	Length (mm / inch)	Notes
CS-M21702		0.2 / 28		56/2.20	0.
CS-M21704	17	0.4 / 57	CS-M	63/2.48	-
CS-M21706	1	0.6 / 85		70/2.76	
CS-M21708		0.8 / 113		83/3.27	-

Note: all above stepper motors are mounted with 1000-line incremental encoders, contact with Leadshine for stepper motors with 2000-line, 2500-line, 5000-line encoders.





Appendix B. Leadshine CS-D403 Compatible Power Supplies

It is highly suggested to use the following Leadshine power supplies to power CS-D403 to get optimized performance. Those power supply are specially designed for stepper and servo controls.

Model	Output Voltage (VDC)	Series Model	Current (A)	Max Current (A)	Input Voltage (VAC)
RPS2410V20	24		10	30	85-132 / 176-264
RPS3611V20	36		11	33	85-132 / 176-264
RPS488V20	48		8.3	24.9	85-132 / 176-264
RPS4810V20	48	RPS	10.5	31.5	85-132 / 176-264
RPS2410	24		10	12	85-132 / 176-264
RPS369	36		9.7	11	85-132 / 176-264
RPS488	48		7.3	8.5	85-132 / 176-264
RPS4810	48		10.4	12.5	85-132 / 176-264
SPS407	42		7.0	9.0	180-240
SPS407-L	42	SPS	4.7	9.0	90-130
SPS487	48		7.0	9.0	180-240
SPS487-L	48		3.0	9.0	90-130



Appendix C. Powering a Third Party Motor with CS-D403

It is highly recommended to choose a Leadshine closed stepper motor along with the CS-D403 closed loop stepper drive, for getting the best system performance and easy setup.

For an OEM project, contact Leadshine sales directly by emailing <u>sales@leadshine.com</u> or <u>sales@leadshineusa.com</u>. Leadshine carry's many other custom models and there may be one there which can satisfy your application need already.

In the case of powering a third party closed loop stepper motor, pay special attention as described below.

- Your stepper motor must be a 2-phase stepper motor
- Your stepper motor must be mounted with a quadrature rotary encoder with the resolution of 500-5,000 line (2,000-20,000 CPR).
- When the CS-D403 is first-time powered on after your stepper motor is connected, check the following possible causes if a position following error (see Section 9 above) happens.
 - o Confirm both encoder and power cables are connected properly and tightly secured.
 - O Power off the drive then swap the A+ and A- motor connections to the CS-D403 drive. The reason is the definitions of your Motor A+ and A- are different from those marked on CS-D403 motor connection pins (P3 of Figure 2).

If protection error is still seen after the above steps, contact your CS-D403 drive supplier or Leadshine technical support.

